


Add Value Station

Usage Instructions

This kiosk will dispense a laundry card. Value can be added to the card with a Credit/Debit Card or a Value Code.

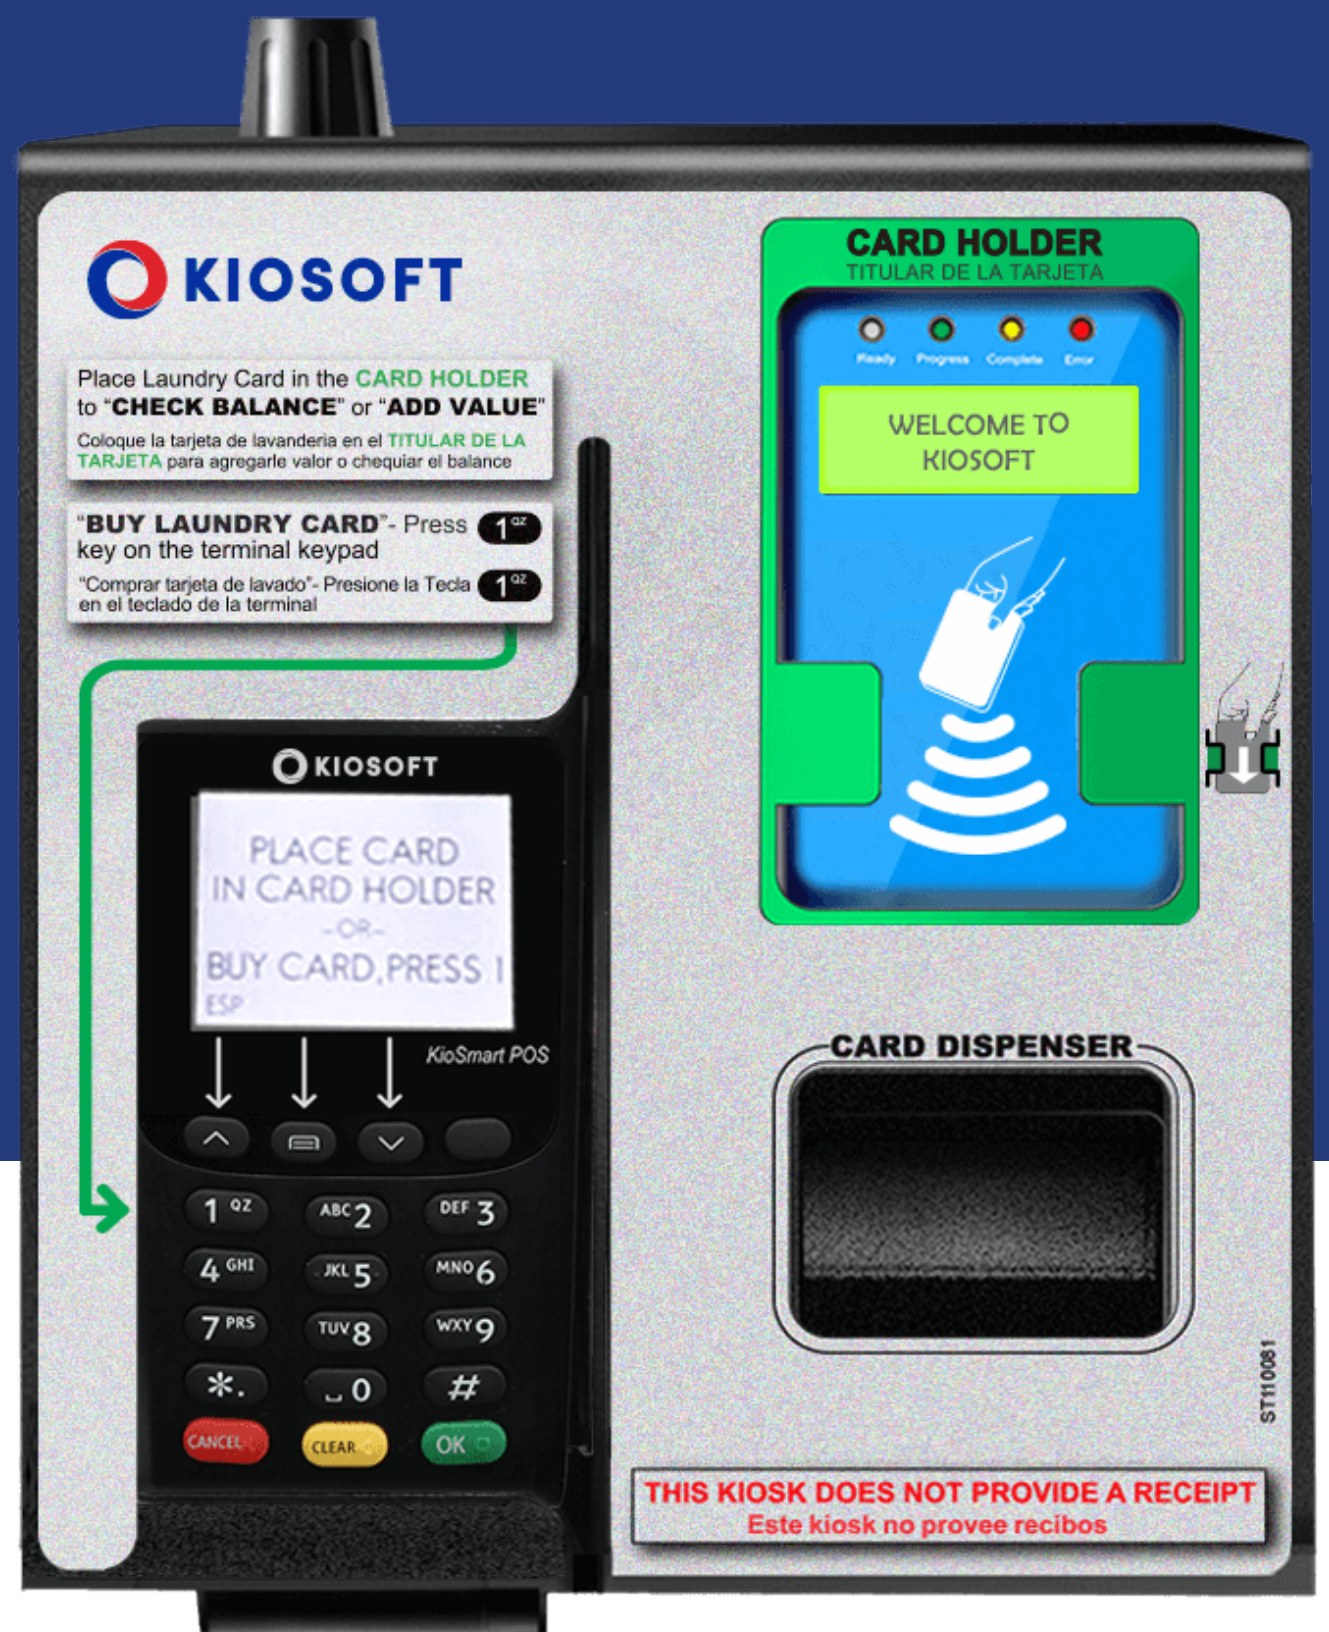

Steps:

1

Buy a Laundry Card:

- Press **1^{QZ}** on the terminal
- Follow instructions on the screen to purchase with your Bankcard or Value Code

2

Add Value to Laundry Card:

- Place your Laundry Card in the **CARD HOLDER**
- Follow instructions on the screen for payment
- Select amount you want to load on the Laundry Card
- Follow the instructions on the screen
- Remove card when prompted